

2

Remove the panel above the climate control



Remove the scews using a Torx T25




Remove the OEM panel using a plastic wig



Remove the original headunit using a Torx T25


6



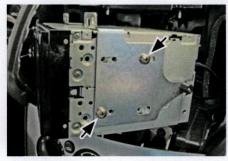

Place the mounting brackets on the new headunit and place the headunit





10



If the two button display is installed there is no trim required



If the color display is installed use the trim.



Replace the panel.