




- **Porsche Cayenne 2002 - 2010**

Compatible with double DIN devices

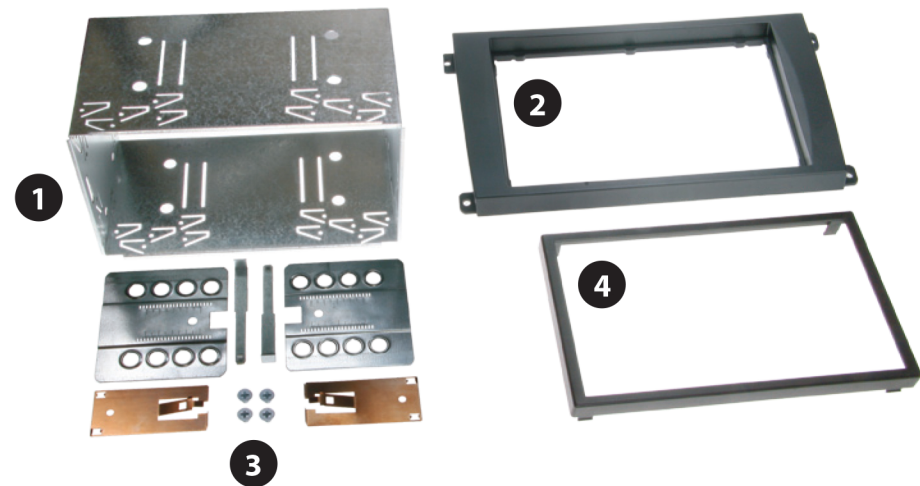

Double DIN Kit contents

- (1) Metal Frame
- (2) Facia Plate

- Installation Kit (3)
- Trim Frame (4)

Installation Manual Double DIN Kit




1. Porsche Cayenne with OEM head unit.



2. Remove trim frame, surrounding the OEM head unit.


Remove the 4 screws.

Remove the OEM head unit.

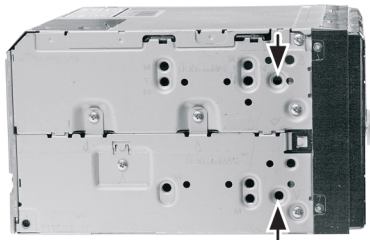

(sample photo)

Mount the metal brackets to the double DIN head unit.

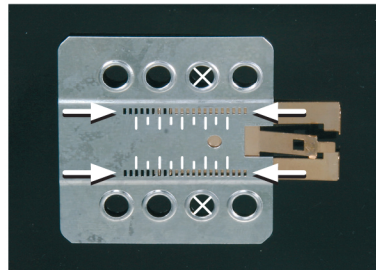

(sample photo)

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)



3. Place facia plate on the dashboard. Fix it with the 4 original screws.

Push the Metal Frame into the facia plate

Connect all required circuit points and push the double DIN head unit in the metal frame until it snaps in.

Place the trim frame.

Reinstall everything in reverse order to finish installation.

All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidental or indirect damages.